



PORTALSPLUS™

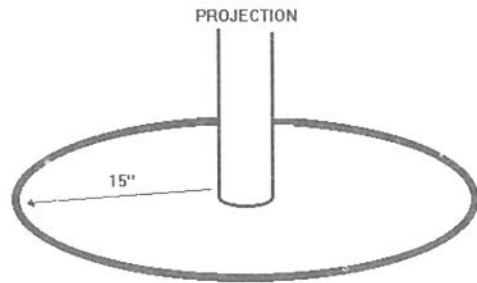


STEP 1

Clean and prepare surface 15" in all directions from the penetration. Check with Roofing Manufacturer to determine if any special preparations are required.

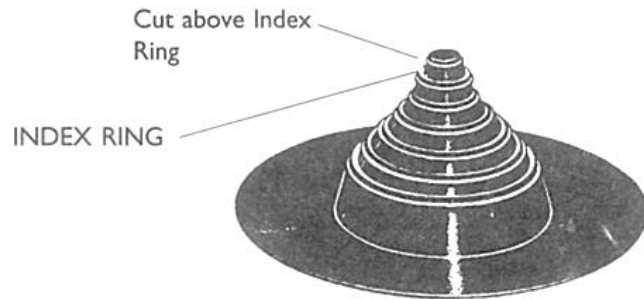


STEP 2

Select proper step of the flashing and cut off above index ring. REMEMBER: When in doubt, cut the smaller size. Clean and prime flange in accordance with roofing manufacturer's recommendations.

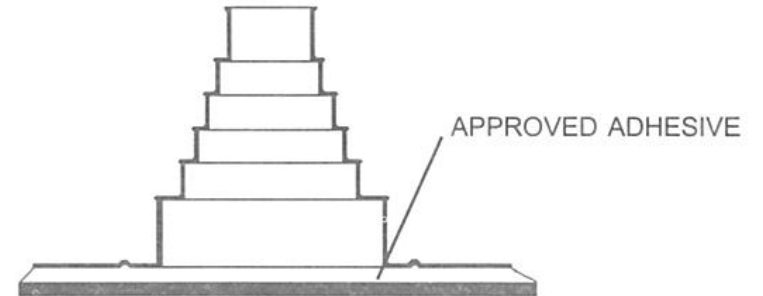

STEP 3

Apply roofing manufacturers' specified adhesive on base flange of boot and place boot around projection and complete attachment of flashing to roofing, according to roofing manufacturers' specifications.

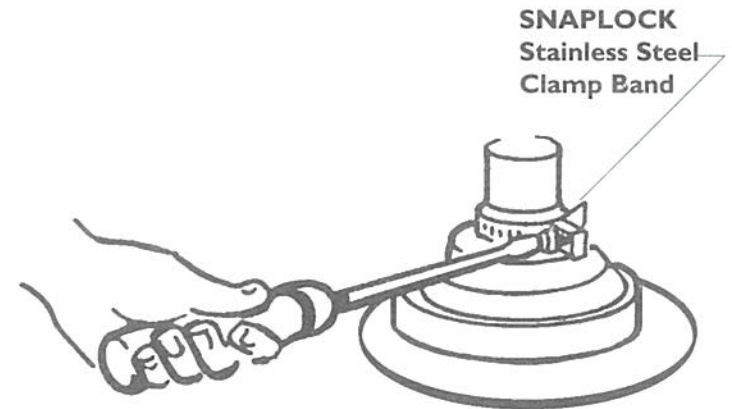

STEP 4

Using the Stainless Steel Snaplock Clamp, place at top of boot and tighten to projection.

Prefabricated Roof Accessories for ALL Roof Systems!